


IMPORTANT INSTRUCTIONS

To reduce failure on the LCD operation panel (PN# B02B-1500-D017A & PN# B02B-1500-D016A) due to ESD damage, this kit must be correctly installed! Please note that this kit is only required and effective on the ESD version of the operation panel. It can be identified by a dull gray coating on its backside.

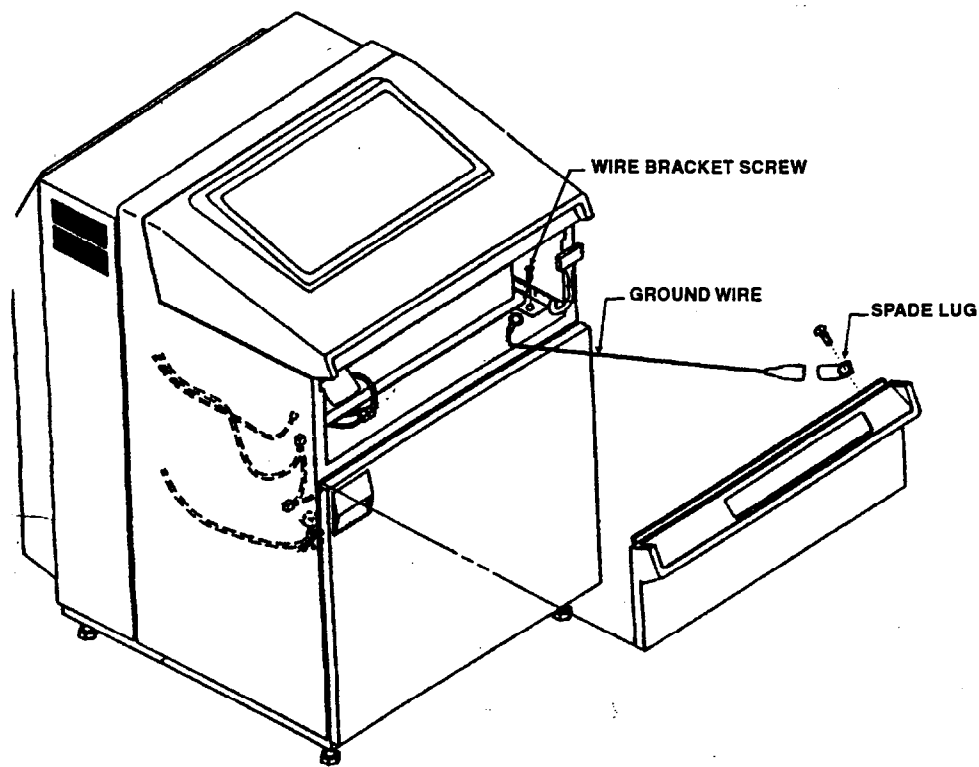

1. When installing the ESD operation panel, connect the male spade lug with screw next to OP panel connector (CNJ18).
2. Remove the screw securing the metal wire bracket to the printer chassis.
3. Install the lug ring end of the ground wire between the chassis and the metal bracket and replace the screw.
4. Connect the female spade connector to the lug on the OP panel.